


Backflow Prevention Assembly Installation Requirements

The following are the **only devices accepted** unless approval from the district is received in advance of installation. All devices are to be **LEAD-FREE**

- Febco Reduced Pressure Principal Device Model No. LF825Y
- Watts Reduced Pressure Principal Device Model No. LF909QT
- Wilkins Reduced Pressure Principal Device Model No. 975XL2

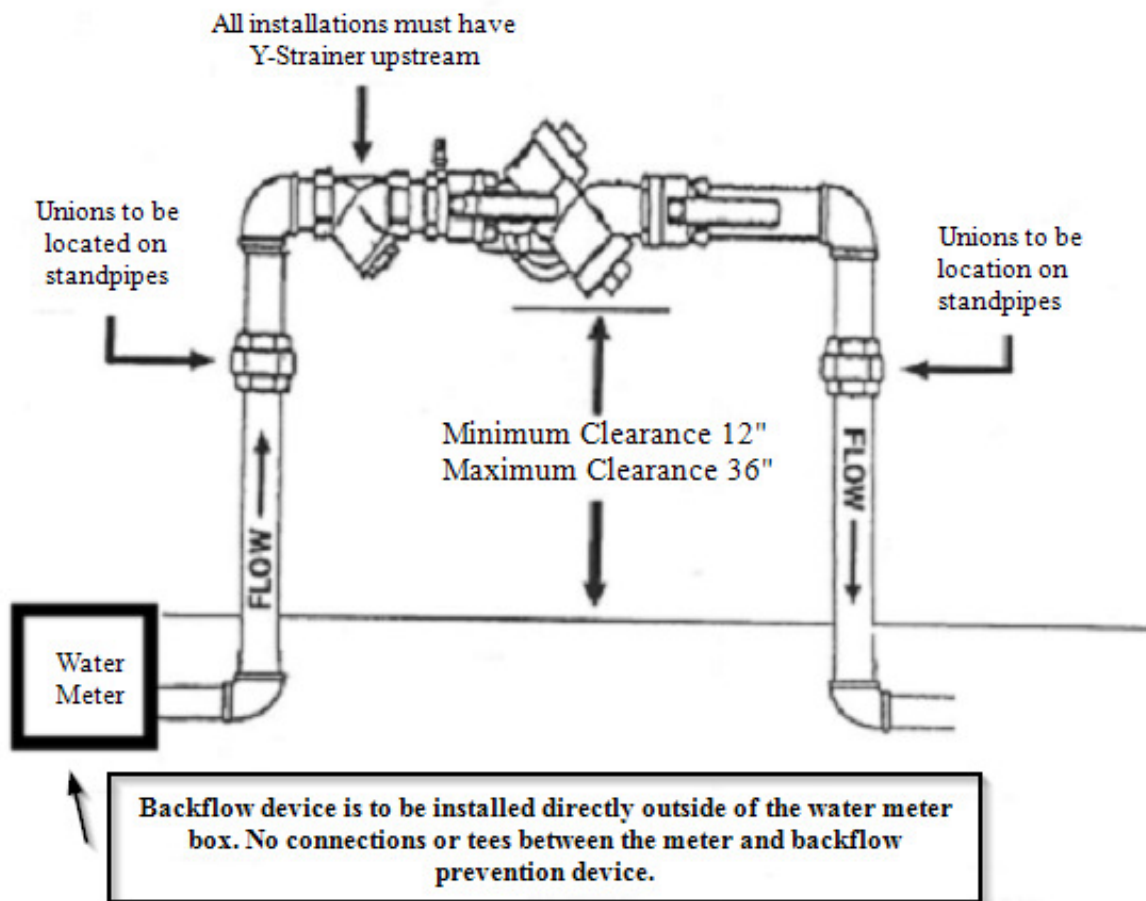

- **Backflow device is to be installed directly outside of the water meter box**
- Resilient seated ball valves and testcocks required
- All pipes and fittings are to be brass or sweated copper (**Lead-Free**)
- No galvanized or PVC pipe